

# Coastal Industries Inc.


FAX NO.  
(904) 641-1697

P.O. BOX 16091  
JACKSONVILLE, FLORIDA 32245

TELEPHONE NO.  
(904) 642-3970

## PVL 3/8" SWING DOOR

**Note:** This door type must be installed into a perfectly square 28" opening. Please make sure that this is so before starting the installation.

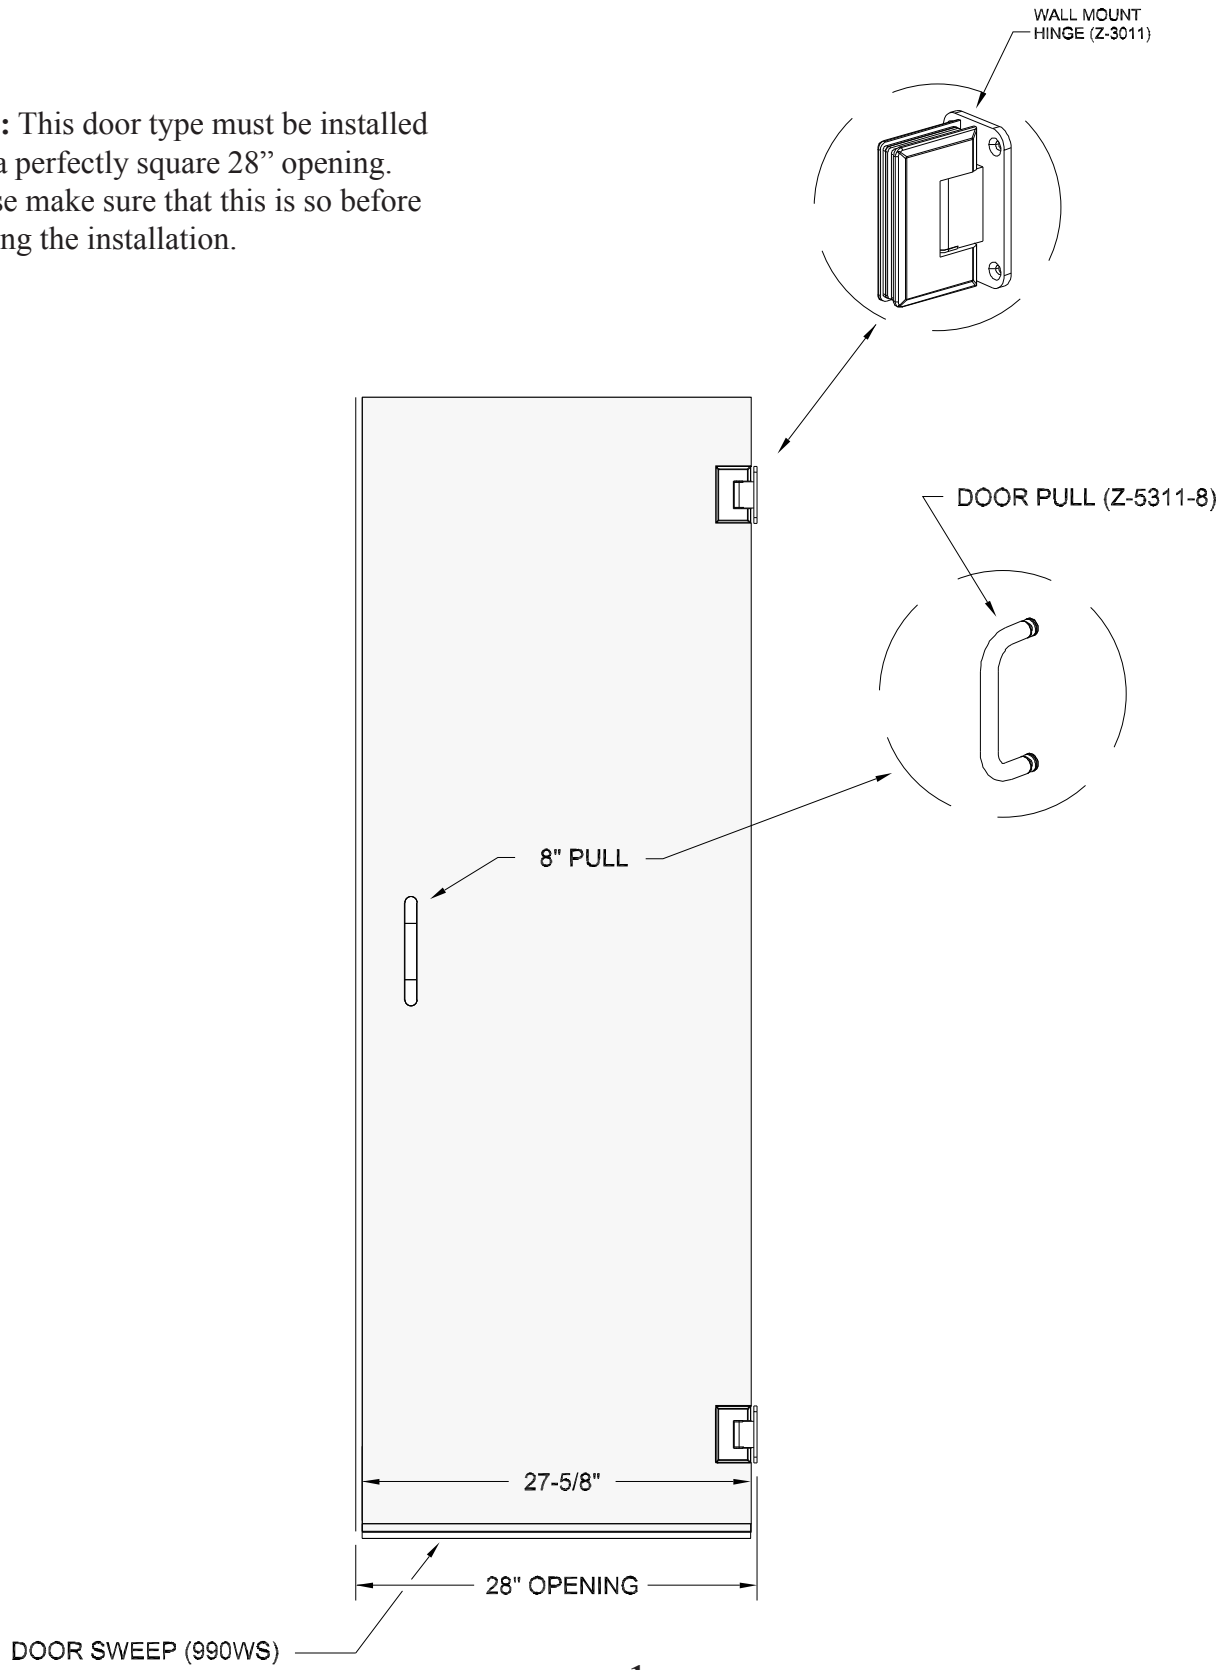

1. Pencil mark the base curb centerline of your unit opening.
2. Before continuing further, position and center a Z-3011 hinge on the curb centerline on opposite wall (to ensure that you have enough width room to mount hinge). If you find that you need to redraw your centerline to accommodate the mounting of the hinge - do so.
3. Install the Door Hinges (Z-3011) on to your Door Glass, making sure that the face screws are facing toward the interior of shower enclosure.
4. Before continuing, you will need to use a 7/16" spacer(s) or shims to continue the mounting of the door. Locate the spacers / shims on the centerline where the door will be.
5. Set the Door on top of 7/16" spacers / or shims. Plumb the door in the opening, then mark the installation holes for your hinges using the installation holes as guides.
6. Remove the Door and drill the installation holes. Insert the screw anchors into the holes, reposition your Door and secure it to the wall using the installation screws provided.
7. Install Sweep (990WS) on the Door. Note: Radius the Sweep corners to remove any sharp edges.
8. Install Door Handle (Z-5311-8) onto the Door.